Revision 04/25/22



LC Pro Rod Bolt Set - Part #1013201, 1013200, 1013204 & 1013207

Torque Specs: Always use ARP Moly Lube

Torque Bolt Stretch 50 ft. lbs. .0060" - .0065"

To accurately determine the life of a bolt, it is recommended that a log of the bolts original free-standing (untorqued) length should be kept and recorded upon subsequent teardowns for inspection. The free-standing length should be checked against it's original length. If there is an increase of .001" or more, or if there is any permanent deformation or galling, the bolt should be replaced. If you do not have a stretch gauge, follow these steps using a Moly assembly lube. After rods are installed into the motor, torque bolts to 50ft-lbs. Loosen the nuts. Torque to 50ft-lbs. again. Loosen the nuts and torque to 50 ft-lbs. a third and final time.

2031 Holly Avenue, Lake Havasu City, AZ 86404 Office 928.505.2501 Fax 928.505.2503



Revision 04/25/22

LC Pro Rod Bolt Set - Part #1013201, 1013200, 1013204 & 1013207

Torque Specs: Always use ARP Moly Lube

Torque Bolt Stretch 50 ft. lbs. .0060" - .0065"

To accurately determine the life of a bolt, it is recommended that a log of the bolts original free-standing (untorqued) length should be kept and recorded upon subsequent teardowns for inspection. The free-standing length should be checked against it's original length. If there is an increase of .001" or more, or if there is any permanent deformation or galling, the bolt should be replaced. If you do not have a stretch gauge, follow these steps using a Moly assembly lube. After rods are installed into the motor, torque bolts to 50ft-lbs. Loosen the nuts. Torque to 50ft-lbs. again. Loosen the nuts and torque to 50 ft-lbs. a third and final time.