

**9070005** Revision 04/25/22

## 3VZ 3.0L V-6 Four Wheel Drive Street Header Kit Pickup & 4Runner Part #1041058 & 1041059

**WARNING!** For a successful installation, please read through the instructions entirely before starting. The Header Kit will remove the EGR valve and air injection (PAIR valve) form the engine.

Qty	Part	Description	Qty	Part	Description
1	1042127	Header Left	6	8012225	M10 1.25 Flange Lock Nut
1	1042127	Header Right	6	8012129	M10 1.25 x Bolt
1	1044005	Exhaust Gasket Set 3VZ	1		3VZ EGR Manifold Block Plate
3	1044027	Collector Gasket 2 <sup>1</sup> / <sub>4</sub> "	1	1016036	5/8 Vacuum Cap
1	1044024	O2 Sensor Gasket	1	1010030	1/8 Vacuum Cap
2	8012372	M8 1.25 x30mm O2 Stud	2	]	Resistor 5.7K Ohm, 10K Ohm 1Each
2	8012332	M8 1.25 Flange Nut O2			

The header kit will require an assortment of metric wrenches, sockets, extensions and other basic hand tools along with moderate mechanical know how.

Install the 3VZ Street Header Kit in the following order.


- 1. Disconnect the negative battery cable and then place the front of the vehicle securely on jack stands and remove the front wheels.
- 2. Remove the inner fender panels to access the lower manifold bolts.
- 3. Disconnect the O2 sensor before the catalytic convertor and remove sensor.
- 4. Remove the stock exhaust from the cat forward to the stock manifolds.
- 5. Remove the 6 nuts that connect the crossover tube (that runs behind the engine) to the manifolds. Then remove the heat shields on the manifolds.
- 6. Disconnect the EGR tubes that run from the passenger side manifold to the intake manifold. Retain the EGR heat sensor plug in the harness as that is where we will install a resistor. Also remove the air injection reed valve tube from the manifold. Both parts will not be reused.
- 7. Remove the exhaust manifolds.
- 8. Remove the crossover tube from behind the engine. Should exit the driver's side between the inner fender panel and the frame. (This takes some finess, but it will come out)
- 9. Clean the gasket surfaces with a contact cleaner and a clean shop towel.
- 10. Install the driver's side header using the new gasket supplied in the kit. Tighten the nuts. The best installation method is to install the header from beneath the vehicle, upwards.
- 11. Install the passenger side header.
  - a. **NOTE:** The passenger side header is a very tight install. Take note of any wires or lines that need to be loosened or temporarily removed to aid in the installation of the header. On some models, it may be necessary to remove the lower (3) exhaust studs to set the header in place and then reinstall them. If you find this necessary, use a good penetrant spray like "PB Blasters" to help remove the studs without damaging the threads inside the head. Also, use the double nut method for removing and re-installing the studs. Or you can also loosen the engine mount and <u>carefully</u> raise the engine enough to install the header.
- 12. The passenger side header will install from the top (on 4Runners) or from the bottom (on trucks). Be careful not to damage any wiring or lines/hoses during the installation.


2031 Holly Avenue, Lake Havasu City, AZ 86404 Office 928.505.2501 Fax 928.505.2503



- 13. Once set in place with the new gasket, tighten all of the nuts to OEM specs.
- 14. Use the EGR block plate on the intake manifold to block off where the EGR tube came out. Use the original gasket or O2 safe high temp RTV . (Because we are removing the EGR assembly). (Picture 4)
- 15. On the left front of the engine install 1/8 vacuum cap on stock steel line that the EGR valve connected to. (see figure 1)
- 16. We also are removing the air injection pair valve. Follow the large hose off the pair valve and remove the hose under intake manifold . Install the 5/8 vacuum cap use the stock clamp. (Picture 1 & 2)
- 17. The EGR heat sensor plug in the harness is where we will install a resistor. We supply two, a 10k ohm and a 5.7k Ohm. Start with the 10k resistor if the check engine light comes on switch resistor to the 5.7k Ohm. Use electrical tape to cover the plug and resistor. (Picture 3)
- 18. Check clearance between the headers and any brake lines, fuel lines or any other parts. You may need to adjust the lines or brackets to gain extra clearance on some applications.



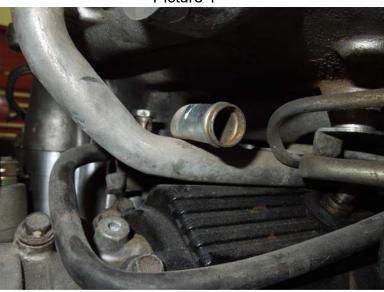

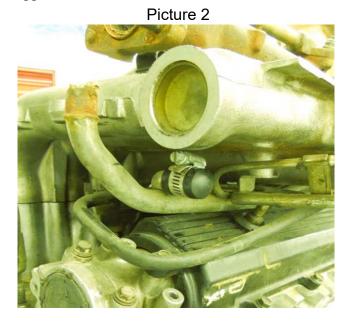

Picture 3

Picture 4





2031 Holly Avenue, Lake Havasu City, AZ 86404 Office 928.505.2501 Fax 928.505.2503



