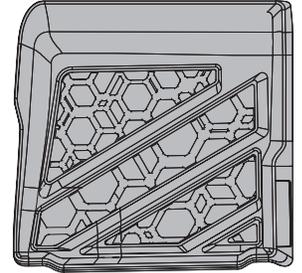
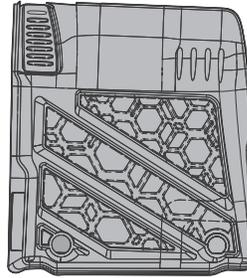
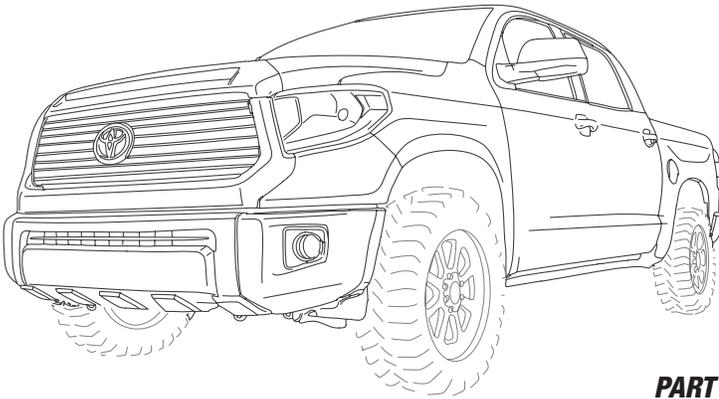
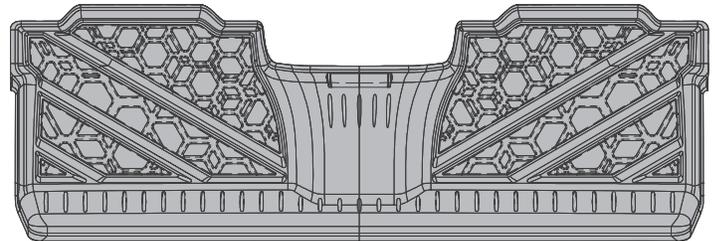


**INSTALLATION MANUAL**
**FLOOR LINERS SET TUNDRA 2015 CREWMAX**
**PART # : 1140NNTJTO01A16**

**ALL TYPE OF CABS**
**LH**
**RH**
**PART # : 1140ENTUTO01A18 PART # : 1140FNTUTO01A17**
**IMPORTANT**

**NOT DESIGNED OR RECOMMENDED  
FOR MODELS EQUIPPED WITH VINYL  
FLOORING**


**ONLY SUPER CREW CAB**
**PART # : 1140DNTUTO01A19**
**TOOLS**


**READ CAREFULLY BEFORE  
INSTALLATION**


**CHECK LIST**

\*Already installed in the piece


ITEM	DESCRIPTION	DRAWING	AMOUNT
A	* DOME - AIRDESIGN		Included 3 pieces

**1 BEFORE INSTALLING**



MAKE SURE YOUR VEHICLE ALREADY HAVE OEM CAR MAT FASTENERS YOU MUST HAVE THEM FOR PROPER INSTALLATION

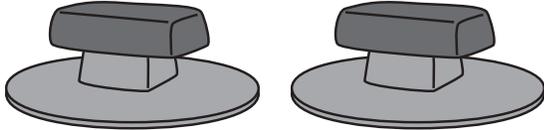




IF IT DOES NOT HAVE, GET THIS PARTS FROM YOUR LOCAL DEALER

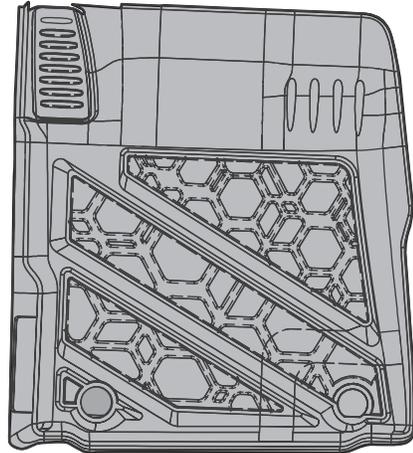**2 IDENTIFY**


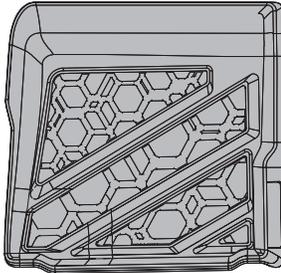
DRIVER'S SIDE


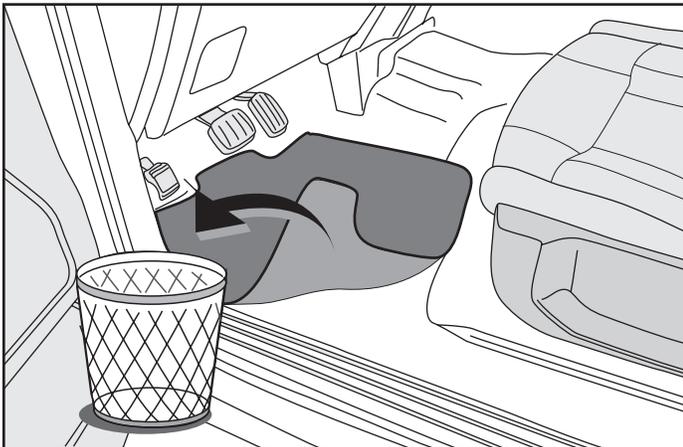
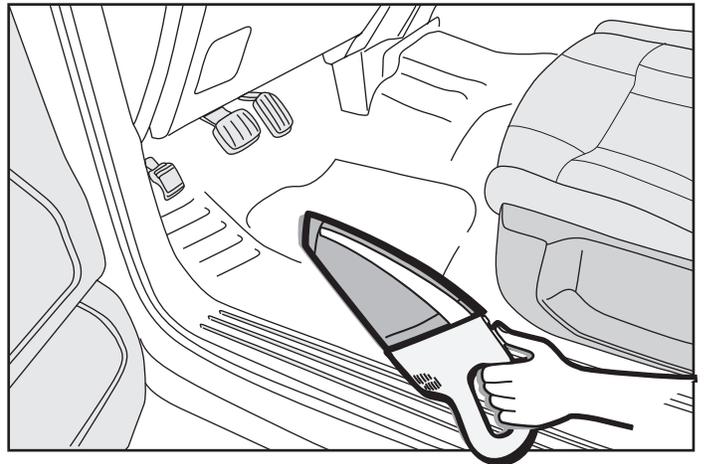
**3 REMOVE OEM MAT**

**4 VACUUM**

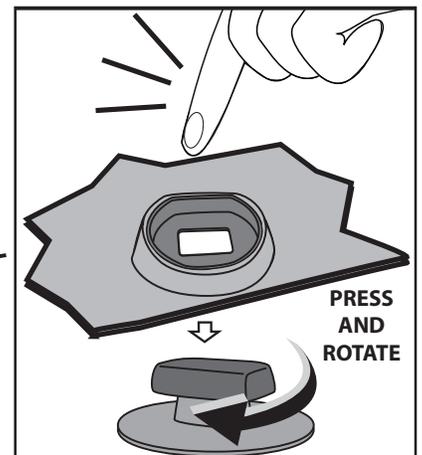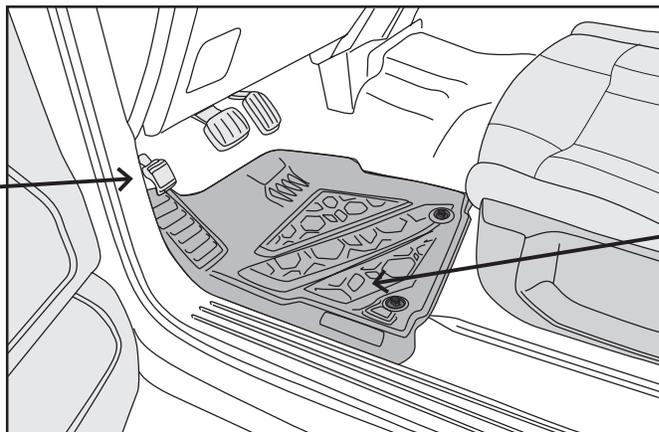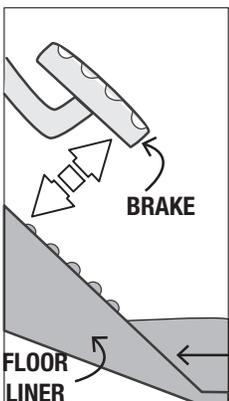**5 MOUNT**

UNOBSTRUCTED

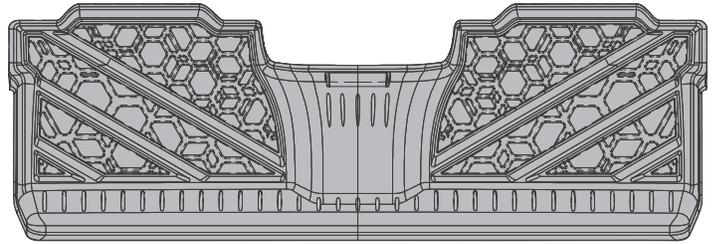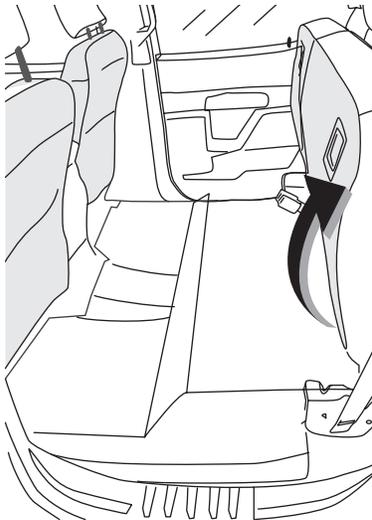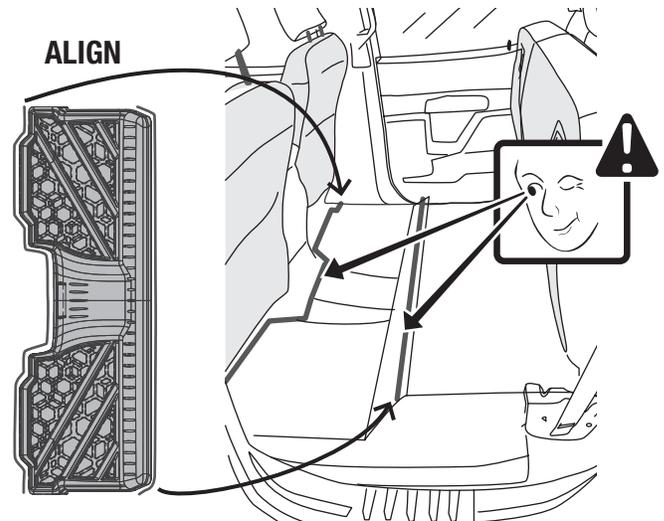

**6** FOR CO-DRIVER'S SIDE REPEAT STEPS 3 & 4

**RH**
**FRONT**

**BACK**
**7** FOR REAR SIDE REPEAT STEPS 3 & 4

**REAR**
**FRONT**

**BACK**
**8** LIFT UP

**9** MOUNT


## IMPORTANT

**FAILURE TO CORRECTLY INSTALL OR RE-INSTALL THE FLOOR LINER TO THE ABOVE INSTRUCTIONS COULD RESULT IN THE LOSS OF CONTROL OF THE VEHICLE AND DEATH OR SERIOUS INJURY.**

**REGULAR CLEANING EXTENDS THE LIFE OF YOUR FLOOR LINERS. CLEAN USING ONLY A MILD DETERGENT SOAP AND WATER. DO NOT USE HARSH CHEMICALS OR ABRASIVE TYPE CLEANERS AS THESE PRODUCTS MAY DAMAGE THE FLOOR LINER.**