

2010+ 4Runner RIPP Catch Can Install Instructions




1. Replace the original catch can fittings with the provided smaller, 1/2in diameter fittings and o-rings. Do not overtighten as the o-ring may tear.
2. Use the provided bolt to attach the catch can to the existing bolt hole on the driver side of the vehicle. Unscrew the can for easier access to tighten bolt.
3. Remove the factory PCV hose and keep the two spring clamps to reuse.
4. Route the longer hose from the catch can inlet fitting to the fitting on the valve cover. Reuse factory spring clamp on the valve cover fitting and use the provided spring clamp on the catch can fitting.
5. Route the shorter hose from the bung on the intake manifold to the outlet of the catch can. Reuse factory spring clamp on the intake manifold fitting and use the provided spring clamp on the catch can fitting.





Catch Can mounts using existing bolt hole on driver side.

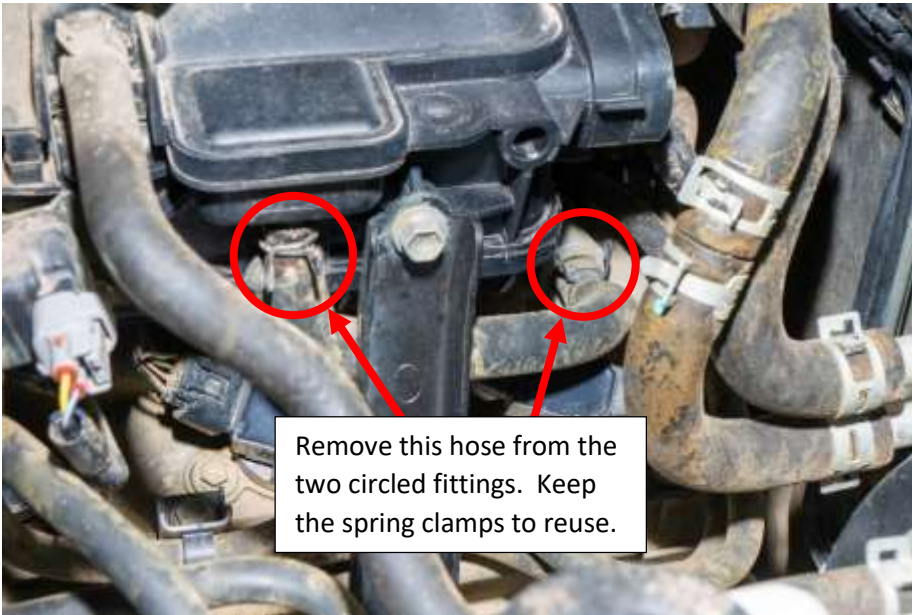

Remove this hose from the two circled fittings. Keep the spring clamps to reuse.



Outlet Hose from Catch Can

Inlet Hose to Catch Can